


underhoist stand is a self-contained auxiliary device designed to be used as a means of partial support for vehicle components during their installation/removal, but not for use in supporting vehicles.

A WARNING

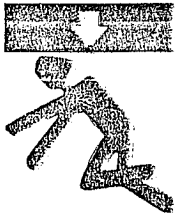

THIS UNIT IS AN ACCESSORY STAND ONLY AND IS NOT DESIGNED OR INTENDED TO SUPPORT VEHICLES.

DO NOT OVERLOAD STAND. OVERLOADING CAN CAUSE DAMAGE TO, OR FAILURE OF, THE STAND.

PLACE LOAD IN THE CENTER OF THE SADDLE ONLY. LOADED STAND MUST BE STABLE BEFORE PROCEEDING WITH WORK.

A VISUAL INSPECTION SHOULD BE MADE BEFORE EACH USE OF THE STAND, CHECKING FOR CRACKED, DAMAGED, LOOSE OR MISSING PARTS.

USE STANDS ON HARD LEVEL SURFACE CAPABLE OF SUSTAINING THE LOAD. USE ON OTHER THAN HARD LEVEL SURFACES MAY RESULT IN POSSIBLE LOSS OF LOAD.

NO ALTERATIONS TO THE STAND SHALL BE MADE.

READ, STUDY AND UNDERSTAND THE INSTRUCTION MANUAL PACKED WITH THIS STAND BEFORE USING STAND.

FAILURE TO HEED THESE WARNINGS MAY RESULT IN LOSS OF LOAD, DAMAGE TO STAND, AND/OR FAILURE RESULTING IN PROPERTY DAMAGE, PERSONAL OR FATAL INJURY.


*3/4 Ton Capacity
Adjustable
Underhoist Stand
w/Foot Pedal*

FEATURES

- ▶ Large 12" Diameter Base for Stability
- ▶ Acme Rod Allows Precise Height Adjustment and Strength
- ▶ UPS Shippable

SPECIFICATIONS

| | |
|---------------------|--------------|
| Capacity | 1500 Lbs. |
| Low Height | 53-1/2" |
| Raised Height | 80" |
| Base | 12" Diameter |
| Shipping Wt. | 29 Lbs. |

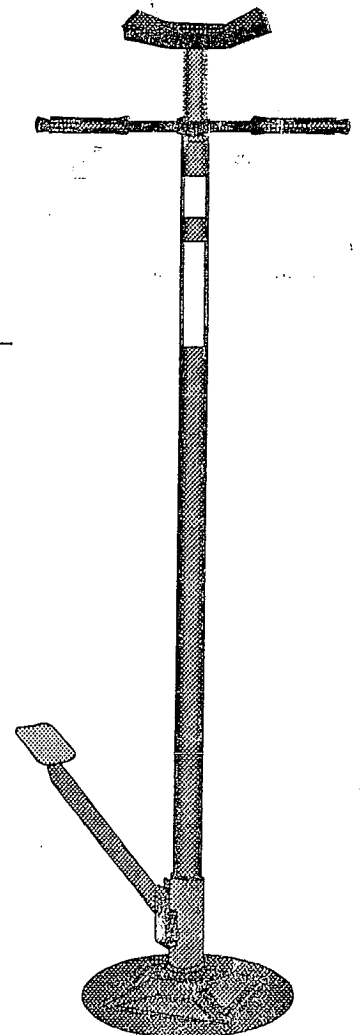

ASSEMBLY INSTRUCTIONS

1. Attach Post Support (#4) to Base (#1.)
2. Insert Post (#2) into the Post Support (#4). Secure by aligning the holes of both the Post (#2) and Post Support (#4) and inserting (1) 5/8" x 2-1/2" Clevis Pin (#5), (2) 11/16" Washers (#6), and (1) Cotter Pin (#7). See exploded diagram for proper placement.
3. Attach Pedal (#10) to the Post Support (#4) and secure with (1) 1/2" x 1-1/2" Clevis Pin (#8), (2) 1/2" Washers (#9) and (1) Cotter Pin (#7). See exploded diagram for proper placement.

INSPECTION

Visual inspection should be made before each use of the under hoist stand, checking for damaged, loose or missing parts. Each stand must be inspected by a manufacturer's repair facility immediately, if accidentally subjected to an abnormal load or shock. Any stand which appears to be damaged in any way, is found to be badly worn, or operates abnormally **MUST BE REMOVED FROM SERVICE** until necessary repairs are made by a manufacturer's authorized repair facility. It is recommended that an annual inspection of the stand be made by a manufacturer's authorized repair facility and that any defective parts, decals or warning labels be replaced with manufacturer's specified parts. A list of authorized repair facilities is available from the manufacturer.

OPERATING INSTRUCTIONS

To Raise:

Turn adjusting handle clockwise until saddle contacts load. Continue turning handle to raise load to required height.


To Lower:

Turn adjusting handle counterclockwise.

OWNER/USER RESPONSIBILITY

The owner and/or user must have an understanding of the manufacturer's operating instructions and warnings before using this under hoist stand. Personnel involved in the use and operation of equipment shall be careful, competent, trained, and qualified in the safe operation of the equipment and its proper use when servicing motor vehicles and their components. Warning information should be emphasized and understood. If the operator is not fluent in English, the manufacturer's instructions and warnings shall be read to and discussed with the operator in the operator's native language by the purchaser/owner, making sure that the operator comprehends its contents.

Owner and/or user must study and maintain for future reference the manufacturer's instructions. Owner and/or user is responsible for keeping all warning labels and instruction manuals legible and intact. Replacement labels and literature are available from the manufacturer.

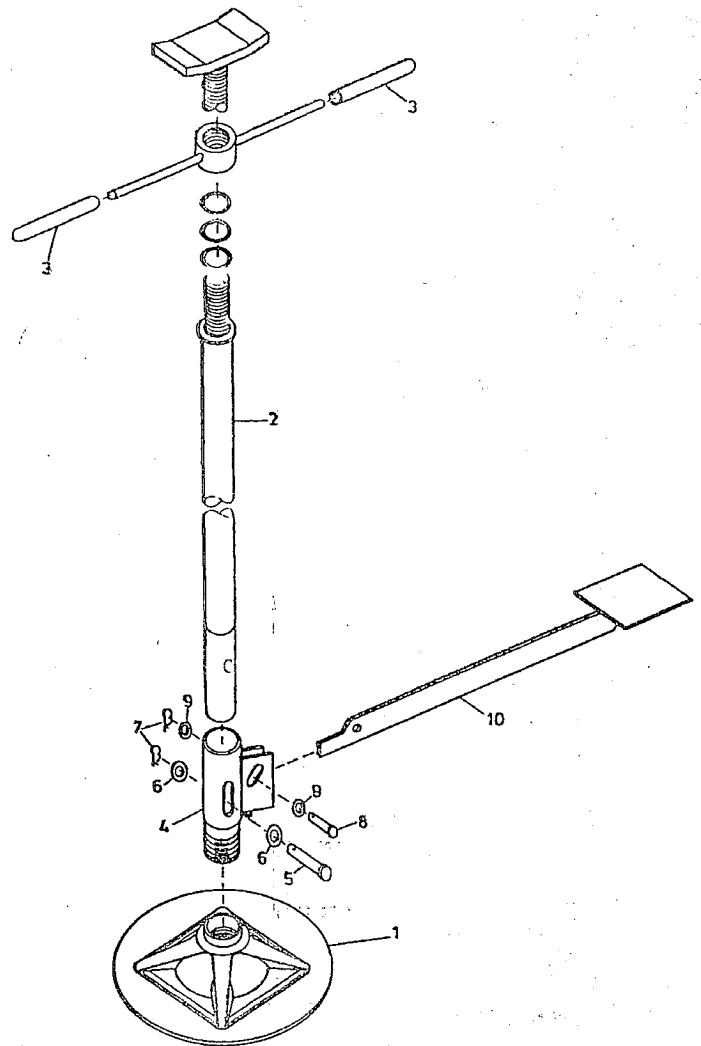

| ITEM NO. | QTY. | DESCRIPTION |
|----------|------|--------------------------|
| 1 | 1 | Base |
| 2 | 1 | Post |
| 3 | 2 | Handle Grip |
| 4 | 1 | Post Support |
| 5 | 1 | 5/8" x 2-1/2" Clevis Pin |
| 6 | 2 | 11/16" Washer |
| 7 | 2 | Cotter Pin |
| 8 | 1 | 1/2" x 1-1/2" Clevis Pin |
| 9 | 2 | 1/2" Washer |
| 10 | 1 | Pedal |